
To ensure that your installation proceeds smoothly, please read this instructions carefully before you begin.

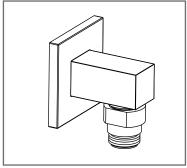

Installation & Operation Instruction






Installation



* Consult the dimension drawing and lay the pipes.

* Wash and clean the water supply pipeline.

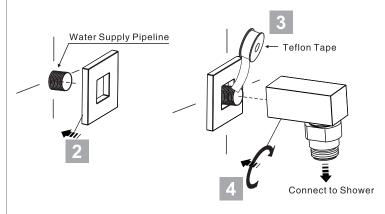

Parts List Body Check Valve Washer Connector Check Valve

Notice

Remove all impurity in pipes before beginning to avoid clogging. When you repair the faucet you will need to shut off hot/cold water supply by closing the water supply.

Conditions for use

- * Water pressure condition: 0.1MPa~0.75MPa
- * Environment Temperature: 1°C~55°C
- * Not for use as a steam outlet.

Cleaning the surface

- * Rinse the product with clean water.
- * Dry with soft cotton flannel cloth.
- * Do not clean the product with acid, polish, abrasives, harsh cleaners, or cloth with a harsh surface as these products may damage the finish.